

Palm™ Reader Handbook

Copyright

Copyright © 2000-2001 Palm, Inc. or its subsidiaries. All rights reserved. Graffiti, HotSync, and Palm OS are registered trademarks of Palm, Inc. or its subsidiaries. The HotSync logo and Palm are trademarks of Palm, Inc. or its subsidiaries. Other product and brand names may be trademarks or registered trademarks of their respective owners.

Disclaimer and Limitation of Liability

Palm, Inc. and its subsidiaries assume no responsibility for any damage or loss resulting from the use of this handbook.

Palm, Inc. and its subsidiaries assume no responsibility for any loss or claims by third parties which may arise through the use of this software. Palm, Inc. and its subsidiaries assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of all important data on other media to protect against data loss.

Important: Please read the End User Software License Agreement with this product before using the accompanying software program(s). Using any part of the software indicates that you accept the terms of the End User Software License Agreement.

Contents

About This Book	1
Chapter 1: Obtaining and Installing eBooks	3
System requirements	3
Obtaining eBooks	3
Installing eBooks	3
Chapter 2: Using the Palm™ Reader Application	7
Opening and switching between eBooks.....	7
Using hyperlinks and images	8
Hyperlinks.....	8
Images	9
Turning pages	9
Turning one page at a time.....	9
Jumping to a particular page.....	10
Using the toolbar	10
Using Go menu commands to navigate.....	11
Using Find and Find Again	12
Using bookmarks	13
Creating bookmarks	13
Finding bookmarks	14
Deleting bookmarks.....	15
Using annotations.....	15
Creating annotations	15
Viewing, editing, and finding annotations	16
Deleting annotations.....	17
Exporting annotations	17
Using Auto Scroll	18
Chapter 3: Managing eBooks.....	19
Viewing book information.....	19
Finding out how much memory an eBook uses	20
Using categories	21
Copying an eBook	22
Deleting an eBook	23
Beaming an eBook to another handheld	24

Chapter 4: Customizing the Palm™ Reader Application... 25

- Selecting Options25
- Palm Reader Preferences26
- Screen Preferences27
- Auto Scroll Preferences28

About This Book

Welcome to the *Palm™ Reader Handbook*. This handbook provides information you need to begin using the Palm™ Reader application on your handheld to read eBooks and manage eBook files.

This book walks you through the following:

- Obtaining and installing eBooks on your Palm OS® handheld
- Opening and reading eBooks
- Turning pages and navigating to other locations in eBooks
- Using the toolbar and Go menu
- Creating, using, and deleting bookmarks
- Creating, using, deleting, and exporting annotations
- Using Auto Scroll
- Viewing book information
- Using categories to organize eBooks
- Copying, deleting, and beaming eBooks
- Customizing the Palm Reader application

Chapter 1

Obtaining and Installing eBooks

The Palm™ Reader application allows you to read eBook files on your Palm OS® handheld. It displays the contents of eBook files on your handheld's screen in a page-by-page format, provides methods for navigating quickly and easily in eBooks, includes options for managing eBook files, and allows you to save bookmarks and annotate pages.

System requirements

To use the Palm Reader application, you need the following:

- A Palm OS handheld running Palm OS 3.5 or higher
- A Windows or Macintosh computer with the Palm™ Desktop organizer software and a web browser installed
- Internet access

Obtaining eBooks

eBooks are available from peanutpress.com, Inc. and its affiliates.

To obtain eBooks from the Internet:

1. Use your web browser to go to <http://www.peanutpress.com>.
2. Locate an eBook you want and download it to your computer.

Note: You'll need to be able to find the file after you've downloaded it, so make sure to specify a folder on your computer that you can find easily.

Installing eBooks

Installing eBooks on your handheld or expansion card is similar to installing an add-on application. Add the eBook file to the queue of files to be copied or updated the next time you perform a HotSync® operation.

To see the installed eBooks, start the Palm Reader application. (See "Opening and switching between eBooks" in Chapter 2.)

To install eBooks using a Windows computer:

1. Copy or download the eBook file into the Add-on folder in your Palm Desktop directory on your computer. (If the file is compressed, expand it into this folder.)
2. Double-click the Palm Desktop icon on your desktop.
3. Click Install.
Tip: You can also access the Install Tool dialog box by selecting Install Tool from the Palm Desktop program group or by double-clicking any file with a PRC, PDB, PQA, PNC, or SCR file extension.
4. Click the down arrow in User and select your user name.
5. Click Add.
6. When the Open dialog box appears, select the eBook files you want to install on your handheld or expansion card and then click Open.
7. (Optional) To change the destination of the eBook files, click Change Destination on the Install Tool window, and then use the arrows to move the application between your handheld and an expansion card. Click OK.
8. Click Done to close the Install Tool window.
9. Perform a HotSync operation to install the eBook files.

To install eBooks using a Macintosh computer:

1. Copy or download the eBook file into the Add-on folder in your Palm folder on your Macintosh. (If the file is compressed, expand it into this folder.)
2. Double-click the HotSync Manager icon in the Palm folder.
3. From the HotSync menu, choose Install Handheld Files.
4. From the User pop-up menu, select your user name.
5. Click Add to List.
6. Select the Add-on folder from the pop-up menu.
7. Select the eBook files to install.
8. Click Add File to add the eBook files to the Install Handheld Files list.
9. (Optional) To change the destination of the eBook files, click Change Destination on the Install Handheld Files window, and

then use the arrows to move the eBook files between your handheld and an expansion card. Click OK.

10. Close the Install Handheld Files window.
11. Perform a HotSync operation to install the eBook files on your handheld or expansion card.

Chapter 2

Using the Palm™ Reader Application

Once you've installed one or more eBooks on your handheld, you're ready to start reading using the Palm™ Reader application.

Opening and switching between eBooks

To see the installed eBooks, open the Palm Reader application.


The first time you open the Palm Reader application, it displays the Open dialog box with a pick list of the installed eBooks. The Open dialog box is also displayed if you previously opened the application but did not open an eBook.

If you previously opened the Palm Reader application and an eBook, the page of the eBook most recently viewed is displayed.

To open the Palm Reader application and an eBook:

1. Tap the Applications icon .
2. Tap the Palm Reader icon .

 


Note: The Card icon  displayed to the right of an eBook name indicates that the eBook is on an expansion card.


3. Select the name of the eBook you want to read in the pick list, and then tap Open.

Tip: You can also double-tap the eBook name to open it.

The contents of the eBook file determine what is displayed first when the eBook is opened. This might be a picture of the book cover, a title page, a table of contents, or the first page of text.

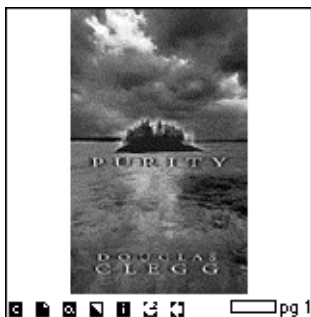

To open or switch to another eBook:

1. Tap the Menu icon .
2. Tap Book, and then tap Open.
3. Select the name of the eBook you want to read, and then tap Open.

Using hyperlinks and images

Most eBook pages will have plain text for reading. However, there are two other types of content you may encounter:

- Hyperlinks
- Images


Hyperlinks

Hyperlinks appear as areas of underlined text. They are linked to another place in the eBook. When you tap a hyperlink, you jump to that place.



Not all eBooks have hyperlinks.

To use hyperlinks to navigate:

1. Tap a hyperlink to go directly to the hyperlink's target.
2. Tap the Back icon  in the toolbar to return to your previous place. You can also use the Back option on the Go menu. See "Using Go menu commands to navigate" later in this chapter.

Images

Images that fit on the screen are displayed inline with text. Images that are larger than the screen are indicated with a thumbnail icon.

To display and view large images:

1. Tap the thumbnail icon .
2. Drag the opened image with the stylus.
3. To zoom an image, press the upper and lower scroll buttons.
4. Tap any icon except the Applications icon  to exit the image viewer.

Turning pages

The Palm Reader application displays eBooks page by page. (An eBook page contains the amount of text that can be displayed at one time.) You can turn pages one at a time or jump to a particular page.

Turning one page at a time

You can turn one page at a time by tapping the screen or pressing the upper or lower scroll buttons.

When tapping the screen to turn a page, don't tap on the following items. If you do, you will jump to a different part of the eBook.

- **Hyperlinks:** Areas of underlined text linked to another place in the eBook. See "Hyperlinks" earlier in this chapter for more information.
- **Bookmarks:** A page marked by a turned down corner in the upper-right corner of the text screen. See "Using bookmarks" later in this chapter for more information.

Page-tapping is controlled by a setting in the Screen Preferences dialog box. See "Screen Preferences" in Chapter 4 for more information on this setting.

To turn to the next page:

- Tap anywhere in the lower half of the page.
- Press the lower scroll button.

To turn to the previous page:

- Tap anywhere in the upper half of the page.
- Press the upper scroll button.

Jumping to a particular page

There are several Palm Reader features that allow you to jump to a particular place in an eBook:

- **Progress bar:** Tap the progress bar located in the lower-right corner of the screen, enter the page number you want to turn to, and tap OK. You can also drag the edge of the progress bar until the page you want is indicated and then tap OK.



- **Toolbar icons:** There are four icons in the toolbar that allow you to navigate in an eBook: Contents, Bookmarks, Annotations, and Back. See “Using the toolbar” later in this chapter for more information on the toolbar and its uses.
- **Hyperlinks:** Tapping a hyperlink takes you directly to that part of the eBook. See “Hyperlinks” earlier in this chapter for more information.
- **Navigation options in the Go menu:** There are five options in the Go menu that allow you to navigate in an eBook. See “Using Go menu commands to navigate” later in this chapter for more information on those options.
- **Graffiti® writing area:** Use the Graffiti writing area to enter a Command stroke for one of the navigation options in the Go menu. See “Using Go menu commands to navigate” later in this chapter for more information on those options.

Using the toolbar








The toolbar is located in the lower-left corner of the screen. It contains up to seven icons, each relating to a particular function.

Each toolbar icon can be enabled or disabled in the Palm Reader Preferences dialog box. See “Palm Reader Preferences” in Chapter 4 for how to turn the toolbar icons on and off.

Most functions controlled by toolbar icons have equivalent menu items, many of them on the Go menu.

Note: The Clock/Battery icon has no menu equivalent.

To use the toolbar, tap one of the following icons:


- **Contents icon**  : Displays the Table of Contents of the open eBook. Select an item in the Contents pick list. Tap Info to view page information on the chapter or section you selected. Tap Go To to jump to that place in the eBook. The menu equivalent is Go To Chapter on the Go menu.
- **Bookmarks icon**  : Displays the Bookmarks dialog box. See “Using bookmarks” later in this chapter for more information on bookmarks and using this dialog box. The menu equivalent is Bookmarks on the Go menu.
- **Annotations icon**  : Displays the Annotations dialog box. See “Using annotations” later in this chapter for more on annotations and using this dialog box. The menu equivalent is Annotations on the Go menu.
- **Invert Screen**  : Toggles the page display between black on white and white on black. The menu equivalent is Invert Screen on the Options menu. See “Selecting Options” in Chapter 4 for more information.
- **Information icon**  : Displays the Book Info dialog box. See “Viewing book information” in Chapter 3 for more information. The menu equivalent is Book Info on the Options menu.
- **Clock/Battery icon**  : Displays the time and battery charge state.
- **Back icon**  : Returns you to where you were in the eBook prior to tapping a hyperlink. The menu equivalent is Back on the Go menu.

Using Go menu commands to navigate

The Go menu contains several command options that allow you to navigate in an eBook.

Tip: Most of the Go menu items have a Graffiti Command stroke, similar to the keyboard shortcut used to execute commands on a computer. The Graffiti Command strokes appear to the right of the command names in the menu.

To use Go menu commands to navigate:


1. Tap the Menu icon .
2. Tap Go, and then tap one of the following commands:

- Go To Page** Displays the progress bar dialog box. Enter the page number you want to go to. You can also drag the edge of the progress bar until the page number you want is indicated. Then tap OK.
- Go To Chapter** Displays the Table of Contents for the open eBook. Select an item in the Contents pick list, and then tap Go To.
- Go To Beginning** Takes you to the beginning of the eBook.
- Go To End** Takes you to the end of the eBook.
- Back** Takes you back to place you were in eBook before tapping a hyperlink.

Using Find and Find Again

If you want to search for specific text, use the Find and Find Again commands.

To find specific words anywhere in an eBook:

1. Tap the Menu icon .
2. Tap Go, and then tap Find.
3. Enter the text you want to find in the Find field.

To find the text anywhere in the entire eBook, leave the check box deselected. To find the text between the current page and the end of the book, tap the check box to select it.



4. Tap Find.

 
To repeat the search for the same text, use the Find Again command on the Go menu.

Using bookmarks


Bookmarks allow you to mark a place in an eBook much like you would insert a paper bookmark in a conventional book. You can use a bookmark to jump to that page.

Creating bookmarks

When you create a bookmark, it shows up as a folded corner at the top right corner of the page.

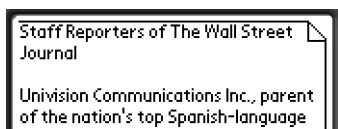

There are three ways to create a bookmark in the Palm Reader application:


- Tap the upper-right corner of the screen.
- Use the Go menu.
- Tap the Bookmarks icon  in the toolbar, if it is displayed. (See “Palm Reader Preferences” in Chapter 4 for how to turn the toolbar icons on and off.)

The first is the easiest way to add a bookmark. You don’t even leave the text screen.

 
To create a bookmark without leaving the text screen:

- Tap the upper-right corner of the screen while reading.

To create a bookmark with the Go menu:


1. Tap the Menu icon .
2. Tap Go, and then tap Add Bookmark.


Tip: You can replace steps 1 and 2 by using the Graffiti Command stroke “/A.”

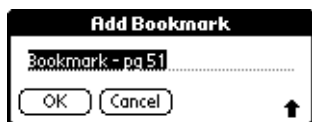

3. Tap OK to accept the default bookmark name and create the bookmark, or edit the bookmark name and then tap OK. If you decide not to create the bookmark, tap Cancel.

To create a bookmark with the Bookmarks icon:

 1. Tap the Bookmarks icon  in the toolbar.

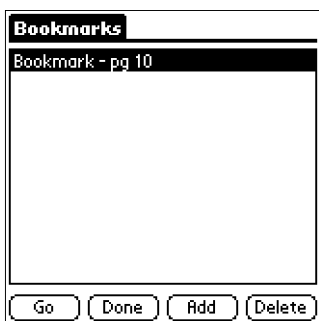


2. Tap Add.
3. Tap OK to accept the default bookmark name and create the bookmark, or edit the bookmark name and then tap OK. If you decide not to create the bookmark, tap Cancel.


Finding bookmarks


You use bookmarks to find a place quickly in an eBook.

There are three ways to find a bookmark. All three take you to the Bookmarks dialog box.

- Use the Go menu.
- Tap the Bookmarks icon  in the toolbar, if it is displayed. (See “Palm Reader Preferences” in Chapter 4 for how to turn the toolbar icons on and off.)
- Use a Graffiti Command stroke.

To find a bookmark:



1. Tap the Menu icon .
2. Tap Go, and then tap Bookmarks.

Tip: You can replace steps 1 and 2 by either tapping the Bookmarks icon  in the toolbar or using the Graffiti Command stroke “/M.”

3. Select the bookmark you want to find, and then tap Go.

Deleting bookmarks



When you no longer need a bookmark, you can delete it. There are four ways to delete bookmarks:

- Go to the bookmarked page, tap the upper-right corner of the screen (where the folded corner is shown), and tap Delete.
- Tap the Bookmarks icon , select the bookmark you want to delete, tap Delete, and tap Delete again.
- Tap the Menu icon , tap Go, and tap Bookmarks to access the Bookmarks dialog box, tap the bookmark you want to delete, and tap Delete.
- Use the Graffiti Command stroke “/M” to access the Bookmarks dialog box, tap the bookmark you want to delete, and tap Delete.

Using annotations


Annotations mark eBook text with commentary. Like a bookmark, you can use annotations to jump directly to a page.

You can export annotations to a file that can be read in Memo Pad. This feature allows you to take notes on an eBook and export them as a single file. See “Exporting annotations” later in this section.


When you are at a page that has an annotation, you will see the Annotations icon in the toolbar change from  to . Tapping on the right side of this icon displays the annotation.

Creating annotations

You create annotations similar to the way you create bookmarks:

- Use the Go menu.
- Tap the Annotations icon  in the toolbar, if it is displayed. (See “Palm Reader Preferences” in Chapter 4 for how to turn the toolbar icons on and off.)
- Use a Graffiti Command stroke.


To create an annotation using the Go menu:

1. Tap the Menu icon .
2. Tap Go, and then tap Add Annotation.

Tip: You can replace steps 1 and 2 by using the Graffiti Command stroke “/N.”

3. Enter an annotation name or accept the default and enter as much commentary as you wish.
4. Tap Done. Tap Delete to exit without adding an annotation.

To create an annotation using the Annotations icon:


1. Tap the Annotations icon .

2. Tap Add.
3. Enter an annotation name or accept the default and enter as much commentary as you wish.
4. Tap Done. Tap Delete to exit without adding an annotation.


Viewing, editing, and finding annotations


You can select, view, and edit any annotation. Then you can exit the annotation or go directly to that page.

There are three ways to work with annotations:

- Use the Go menu.
- Tap the Annotations icon .
- Use a Graffiti Command stroke.

To view, edit, or find an annotation:

1. Tap the Menu icon .
2. Tap Go, and then tap Annotations.

Tip: You can replace steps 1 and 2 by tapping the Annotations icon  or by using the Graffiti Command stroke “/T.”

3. Select an annotation from the pick list, and then tap View.
4. (Optional) Edit the annotation name or annotation.
5. Tap one the following commands:


Done Save your changes (if any) and exit back to the text screen.


Go To Save your changes (if any) and go to the place marked by the annotation.

Deleting annotations

You delete an annotation similarly to the way you view or go to an annotation.

To delete an annotation:

1. Tap the Menu icon .
2. Tap Go, and then tap Annotations.


Tip: You can replace steps 1 and 2 by tapping the Annotations icon  or by using the Graffiti Command stroke “/T.”

3. Select an annotation from the pick list, and then tap Delete.
4. Tap Delete again.

Exporting annotations

The exporting annotations feature allows you to save the contents of all your annotations for an eBook in one record in Memo Pad for convenient review. When you open an annotation file in Memo Pad, you see the assigned page number for each annotation followed by the text you entered.

To export annotations to a memo:

1. Tap the Menu icon .
2. Tap Book, and then tap Export Annotations.

The memo containing all the annotations from the currently open eBook is created and assigned a name in the format “Annotations


- *eBook name*," where *eBook name* is the name of the eBook the annotations were exported from.

Using Auto Scroll

Auto Scroll allows you to read a book without having to manually turn pages. When you enable Auto Scroll, the text of the book scrolls up the screen at a speed that you can easily adjust at any time.

See "Auto Scroll Preferences" in Chapter 4 for how to set the scrolling speed for Auto Scroll.

To start Auto Scroll:

1. Tap the Menu icon .
2. Tap Options, and then tap Start Auto Scroll.

Note: While Auto Scroll is enabled, the toolbar is not displayed.

To adjust the Auto Scroll speed while reading:

- Press the lower scroll button to increase the speed of Auto Scroll.
- Press the upper scroll button to decrease the speed of Auto Scroll.

To stop Auto Scroll:

- Tap anywhere on the text screen while reading.

Chapter 3

Managing eBooks

This chapter explains how to manage eBook files on your handheld using the following Palm™ Reader features:


- **Book Info:** View information about the currently open eBook.
- **Edit categories:** Use categories to organize eBooks.
- **Memory information:** Find out how much memory an eBook is using.
- **Copy and Delete:** Copy or delete an eBook from your handheld's memory or expansion card.
- **Beam:** Beam an eBook from your handheld to another handheld.


Viewing book information

 
This section describes how to view Book Info from the Options menu. This dialog box includes page count and category information.

There is another Book Info that displays memory information about the currently open eBook. See “Finding out how much memory an eBook uses” later in this chapter for more information.

To view book information:

1. Tap the Menu icon .
2. Tap Options, and then tap Book Info.

Tip: You can replace steps 1 and 2 by tapping the Info icon  in the toolbar, if it is displayed. (See “Palm Reader Preferences” in Chapter 4 for how to turn toolbar icons on and off.)

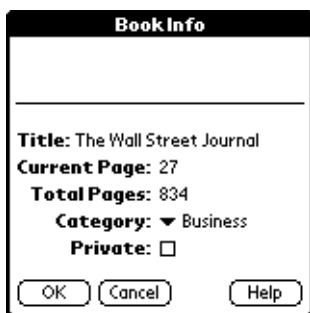

3. View the title and page information for the open eBook and the category the eBook is filed in. (See “Using categories” later in this chapter for more information on categories.)

Note: If the Private option is selected, the eBook is a private record. When Hide Records is selected for the handheld, a private eBook is not displayed in eBook pick lists.


4. (Optional) Tap Help to view Help information, and tap Done when finished.
5. Tap OK or Cancel.

Note: If you changed the Category or Private setting, you must tap OK to save the changes.

Finding out how much memory an eBook uses

Knowing how much memory an eBook uses can help you determine which eBooks to keep on your handheld and which ones to delete or move to an expansion card.

To find out how much memory an eBook is using:

1. Tap the Menu icon .
2. Tap any of the following options: Open, Delete, Beam, or Copy.




Note: This example shows the Open dialog box.

 
3. Select the name of an eBook, and tap Info.
The memory size of the selected book and the amount of free memory on your handheld or expansion card is displayed.
4. Tap OK.
5. Tap Cancel.

Using categories

You can add new categories, edit categories, and delete categories. Then you can assign eBooks to categories or move them from one category to another.

To add a new category, rename a category, or delete a category:

1. Tap the Menu icon .
2. Tap Options, and then tap Book Info.
3. Tap the down arrow next to Category.
4. Tap Edit Categories in the category list.

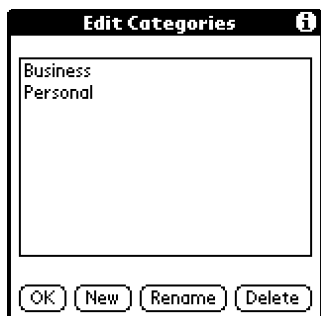


5. Tap one of the following options:

 
New Adds a new category. Enter the new category name and tap OK.

Delete Deletes the selected category. When you tap Delete, the category is immediately deleted. If the category has eBooks in it, they are reassigned to the Unfiled category.

Rename Renames the selected category.

To change the category of an eBook:


1. Tap the Menu icon .
2. Tap Options, and then tap Book Info.
3. Tap the down arrow next to Category.

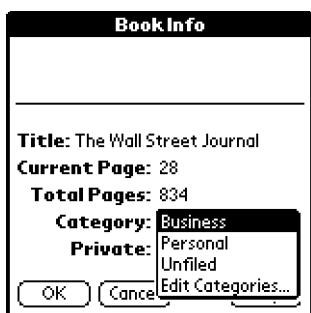

4. Tap the name of the category you want to move the eBook into, and then tap OK.


Copying an eBook

Expansion cards allow you to store eBooks for later use. Copy any eBook you want to store on an expansion card and then open and read the copy on your handheld or on another handheld.

Once the eBook file is copied to the expansion card, you can see it in the pick lists in the Open, Delete, Beam, and Copy dialog boxes. To indicate that the eBook is on an expansion card, the Card icon  is displayed to the right of the eBook name.



To copy an eBook to an expansion card:


1. Tap the Menu icon .
2. Tap Book, and then tap Copy.
3. Select the name of the eBook you want to copy from the pick list, and then tap Copy.

 
Note: If the eBook you are copying originates on the handheld, it is copied to the expansion card automatically. If the eBook you are copying originates on the expansion card, it is copied to the handheld.


Deleting an eBook

When you no longer have a need for an eBook on your handheld, it is a good idea to delete it to conserve memory space.

To delete an eBook,

1. Tap the Menu icon .
2. Tap Book, and then tap Delete.

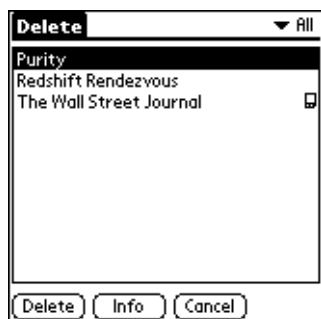


Note: The Card icon  displayed to the right of an eBook name indicates the eBook is on an expansion card.

3. Select the name of the eBook you want to delete, and then tap Delete.
4. Tap Delete again.

Beaming an eBook to another handheld

You can beam an eBook from your handheld to another handheld as long as it is not protected by a password. Password-protected eBooks cannot be beamed.

To beam an eBook that is not password protected:

1. Tap the Menu icon .
2. Tap Book, and then tap Beam.
3. Select the name of the eBook you want to beam, and then tap Beam.

Note: The second handheld must have Beam Receive on in the General Preferences screen.

4. When the Beam dialog box appears, point the IR port of your handheld directly at the IR port of the receiving handheld. Wait for the dialog box to indicate that the transfer is complete before you continue working on your handheld.

Chapter 4

Customizing the Palm™ Reader Application


There are several features you can use to customize the Palm™ Reader application to look and work the way you prefer. This chapter explains how to find and change these settings:

- Display of launch screen, warnings, and toolbar icons
- Audible tapping sounds
- Page tapping
- Screen orientation
- Quality of images and rate of page turning
- Font size
- Black-on-white or white-on-black screen text
- Auto Scroll speed

Selecting Options

You access the customizing features through the Options menu.

To open the Options menu:

1. Tap the Menu icon .
2. Tap Options, and then tap one of the following options:

Preferences	Displays the Palm Reader Preferences dialog box. See “Palm Reader Preferences” later in this chapter for more information.
Screen Preferences	Displays the Screen Preferences dialog box. See “Screen Preferences” later in this chapter for more information.
Font - Small	Tap to display the text of an open eBook in small font.
Font - Large	Tap to display the text an open eBook in large font.

 
Invert Screen

Tap to change the text screen from black-on-white text to white-on-black, or vice versa.

Auto Scroll Preferences Displays the Auto Scroll Preferences dialog box. See “Auto Scroll Preferences” later in this chapter for more information.

Palm Reader Preferences

The Palm Reader Preferences dialog box allows you to customize the toolbar in the lower-left corner of the Palm Reader text screen and control whether the launch screen or certain warning screens are displayed. You control audible tapping from this dialog box as well.

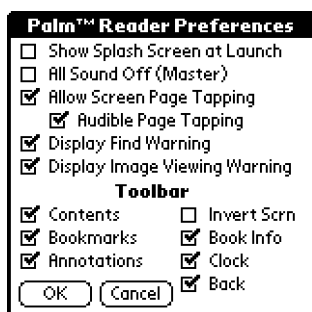

Note: All of the settings shown in this example are the default settings.

- **Show Splash Screen at Launch:** Shows the About box when you open the Palm Reader application.
- **All Sound Off (Master):** Controls only the sounds that the handheld makes for the Palm Reader application. These sounds include tapping the screen, tapping in the Graffiti® writing area, and the beep made by pop-up dialog boxes. This option allows you to run the Palm Reader application silently.

- **Allow Screen Page Tapping:** Controls whether tapping on the text portion of the screen turns the page. If you deselect this setting, you must use the upper and lower scroll buttons to turn pages.

Note: When this setting is deselected, the icons in the toolbar and hyperlinks still respond to taps.

- **Audible Page Tapping:** Controls whether tapping on a page makes a sound. If this setting is deselected, page tapping to turn pages still works, but there is no sound to accompany each tap. Sounds

are still generated when you tap a toolbar icon or one of the icons in the Graffiti writing area.

- **Display Find Warning:** Controls the display of the Find Warning dialog box, normally displayed when you start a search for text using Find (in the Go menu).

Note: Tapping Never Warn in the Find Warning dialog box also turns off the Find Warning. Once it is turned off, you must use the Display Find Warning check box in the Palm Reader Preferences dialog box to turn it back on.

 
- **Display Image Viewing Warning:** Controls the display of the Image Viewing Warning dialog box, normally displayed when an image in an eBook is displayed.

Note: Tapping Never Warn in the Image Viewing Warning dialog box also turns off the Image Viewing Warning. Once it is turned off, you must use the Display Image Viewing Warning check box in the Palm Reader Preferences dialog box to turn it back on.

- **Toolbar:** Selecting these check boxes determines which icons appear in the toolbar in the lower-left corner of the screen. Most of the toolbar items have menu equivalents. See “Using the toolbar” in Chapter 2 for information on how to use the toolbar icons.

Screen Preferences

The Screen Preferences dialog box contains settings that control the way text is displayed on the Palm Reader screen: the direction of text, where you page-tap to turn pages, and the display quality.

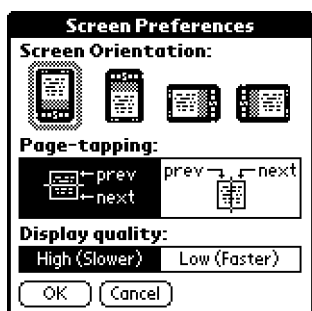


- **Screen Orientation:** Allows you to choose the direction for the eBook text display. Four icons show how you hold the handheld to read the text. The third icon shows landscape mode, which has the handheld’s buttons on the right. Landscape orientation is

particularly useful for a right-handed person reading with one hand.

- **Page-tapping:** Controls where you tap on the screen to turn pages. The icon on the left sets Page-tapping so that a tap on the lower half of the screen takes you to the next page, and a tap on the upper half of the screen takes you to the previous page. The icon on the right sets Page-tapping so that a tap on the right side of the page takes you to the next page, and a tap on the left side of the screen takes you to the previous page.
- **Display Quality:** Allows you to choose between high-quality images combined with slower page turning and low-quality images combined with faster page turning.

Auto Scroll Preferences

 Auto Scroll allows you to read a book without having to manually turn pages. This section explains how to set the scrolling speed for Auto Scroll. See “Using Auto Scroll” in Chapter 2 for information on how to use Auto Scroll.

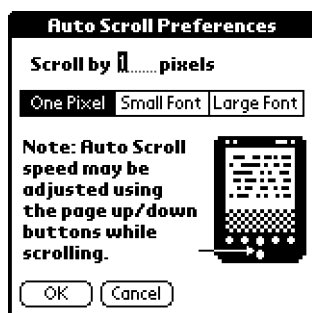

- **One Pixel:** Sets the scrolling speed to minimum.
- **Small Font:** Sets a speed that is appropriate if the screen is configured to use the small screen font.
- **Large Font:** Sets a speed that is appropriate if the screen is configured to use the large screen font.

Note: When you tap One Pixel, Small Font, or Large Font, the value in the field above changes. You can manually adjust the scrolling speed by entering a number in this field.