

Standard GSM Phone Driver

Use this driver to establish a connection between your Tapwave™ Zodiac™ console and a Bluetooth-enabled phone. Tapwave can NOT assist you with configuring your GSM or GPRS connection. For assistance configuring your GSM or GPRS connection, contact your cellular service provider. You must have a GSM phone to use this driver.

Note: only use the Standard GSM Phone Driver if Tapwave does not offer a phone driver for your specific phone.

Installation Instructions for Windows Users

1. Download the StdGSMDriver.prc. Be sure to note the location of the directory/folder the file is extracted to.
2. Double-click the StdGSMDriver.prc to launch the Install tool in Palm Desktop.
3. Select the correct user name for the Zodiac you are installing to from the User list.
4. Select OK.
5. During the next HotSync synchronization, the Standard GSM Phone Driver will be installed and activated.
6. After installation you will be prompted to reset your Zodiac console to use the driver.

Instructions for pairing the Zodiac and Standard GSM phone via Bluetooth

Settings on the Phone:

PLEASE REFER TO YOUR PHONE USER GUIDE FOR INSTRUCTIONS ON HOW TO TURN ON THE BLUETOOTH RADIO AND ACCEPT A BLUETOOTH CONNECTION.

Settings on the Zodiac:

1. Go to Prefs.
2. Go to Connections Panel.
3. Tap "New" to create a new connection.
4. Enter BT to (Your Phone) as the name for the connection.
5. Connect To: = Phone.
6. Via: = Bluetooth.
7. Select the Standard GSM phone from the Model list.
8. Select Device: Tap to Find.
9. A dialog will pop up "Add to trusted device list" press YES.
10. When prompted for a passkey, enter anything you like.
11. Select OK.
12. On the phone you will be prompted to enter a corresponding passkey.
13. Enter the same passkey as on the Zodiac and select OK.

You will receive a confirmation dialog on the Zodiac asking if you would like this to be the default connection for your phone applications. Choose yes if this is the phone you will use most often.